



262W

Round Juvenile Table



263W

Child's Table



Congratulations!

This fine piece of furniture will make a handsome addition to your home. For the best results, start by reading both the Assembly Instructions and Finishing Hints **before** you begin your project.

For normal household use only.
NOT recommended for commercial use.



Do not climb, sit or stand on this piece of furniture.

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.



P.O. Box 2827
Eugene, OR 97402 USA

CALL US FIRST!

DO NOT RETURN ITEM TO STORE

Service Policy: We will replace any parts which are defective, missing or damaged during assembly. Please contact Whittier Wood Products customer service department directly (by phone, fax, mail or email) for replacement parts.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). A message can be left 24 hours a day, 7 days a week.

To Order: Provide the complete furniture model number, part letter, production code, quantity needed, reason for replacement and your full name and address along with a telephone number in case we need to contact you.

Parts ship from our Eugene, Oregon factory within 1 or 2 business days from the time we receive the request. Please allow 5-10 business days for delivery.

800-653-3336

Outside U.S. or Canada: 541-687-0213

Fax: 541-687-2060 • www.whittierwood.com

Mail: P.O. Box 2827 • Eugene, Oregon 97402, U.S.A.

IMPORTANT NOTES:

- Read both the Assembly Instructions and Finishing Hints completely before beginning.
- Store the parts: 1) in their box; 2) in a dry place; 3) in temperatures ranging from 40° to 90°. (Not on a cold, possibly damp, cement floor.)
- Inspect your furniture periodically for any loose glue joints or screws, or any other problem which may be affecting the stability of your furniture. Tighten or repair as needed.

Production Code:


262W & 263W Tables

TOOLS REQUIRED: 7/16" Wrench, Phillips Head Screwdriver.

BEFORE BEGINNING ASSEMBLY, check that the quantities of the parts received match those on the parts list below.


PART	DESCRIPTION	QTY.	PART	DESCRIPTION	QTY.
A	Top	1	E	1/4"x2" Lag Bolt	4
B	Apron	4	F	#8x1 1/4" Pan Head Screw	12
C	Leg Brace	4	G	#6x5/8" Flat Head Screw	8
D	Leg	4	H	1/4" Washer	4

HARDWARE

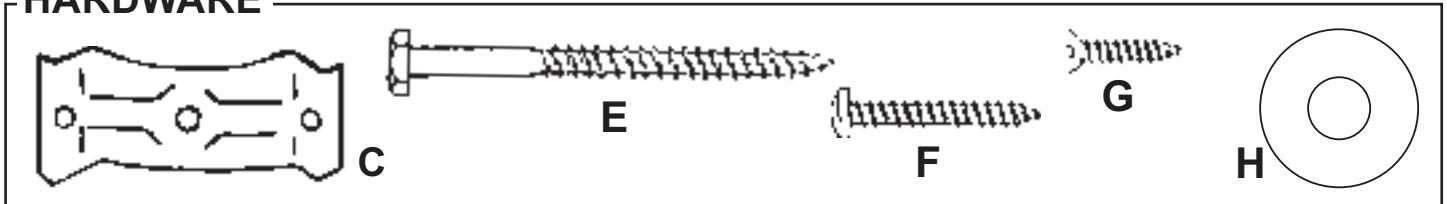

SPECIAL INSTRUCTIONS

If the top or a panel should become cupped, do not be alarmed. The panel was flat when it was manufactured. It is a natural characteristic of wood in an unfinished state to cup from uneven moisture conditions. The Figure at the right shows an exaggerated view of what could happen. This only means that the **convex side has absorbed moisture, or the concave side has dried out.**

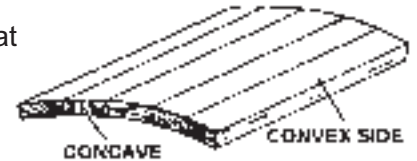

Usually a cupped panel will equalize and straighten out if both sides are exposed to similar conditions for a day or so.

ASSEMBLY INSTRUCTIONS

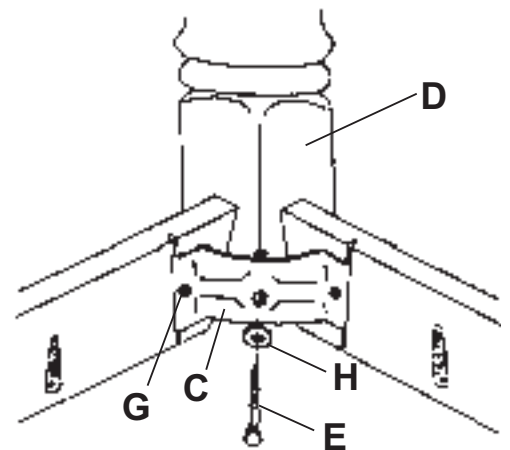
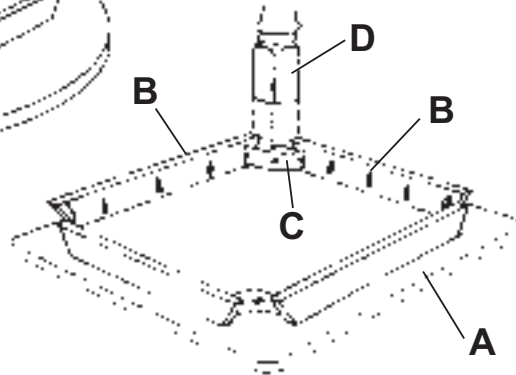
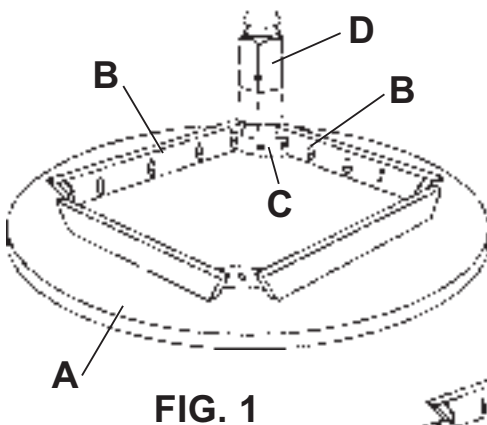


FIG. 2

TO ATTACH THE APRON AND LEGS TO THE TOP:

- 1) Lay the Top (A) upside down on a padded surface. Lay each Apron (B) in its approximate location. Insert a Leg Brace (C) into the groove at each end of the apron. See FIGURE 1.

Insert the Lag Bolt (E) with Washer (H) through the Leg Brace into the predrilled hole in the leg and tighten securely. **DO NOT OVER TIGHTEN OR YOU MAY STRIP THE WOOD.** Attach a Leg Brace to each end of the aprons with a #6x5/8" Flat Head Screw (G). See FIGURE 2. Center the aprons on the top and attach each apron to the top with a #8x1 1/4" Pan Head Screw (F) through the three countersunk holes in each apron.