

McKenzie Headboard

Model #

1356AFGAC; 1356AFCAF McKenzie Twin Headboard


1357AFGAC; 1357AFCAF McKenzie Full/Queen Headboard

1358AFGAC; 1358AFCAF McKenzie King/Cal-King Headboard

AFGAC = Glazed Antique Cherry finish

AFCAF = Caffè finish

Assembly Instructions

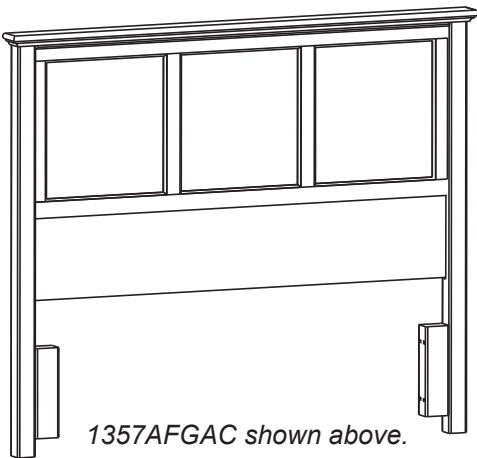

Congratulations!

This fine piece of furniture will make a gorgeous addition to your home. For the best results, read the Assembly Instructions before you begin your project.

IMPORTANT NOTES:

- For normal household use only. **Not** recommended for commercial use.
- Before you move this item, check to make sure all screws and supports are tight.
- Before you begin your project, completely read the Assembly Instructions.
- Store this item: 1- in its box; 2- in a dry place; 3- in temperatures that range from 40°F to 90°F (not on a cold and possibly damp cement floor).
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.



CALL US FIRST! *Do not return this item to the store.*

Service Policy: We will replace any part that is defective, missing or damaged during assembly. Please contact Whittier Wood Products customer service department directly by phone, fax, mail or email for a replacement part.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). You may leave a message 24 hours a day, seven days a week.

To Order: Designate the finish, provide the furniture model number (upper portion of this page), the part letter, production code, quantity needed, reason for replacement and your full name, address and telephone number.

Parts ship from our Eugene, Oregon factory within one or two business days from the time we receive your request. Please allow five to ten business days for delivery.

800-653-3336 • Outside the U.S. or Canada: 541-687-0213 • Fax: 541-687-2060
www.whittierwood.com • P.O. Box 2827 • Eugene, Oregon 97402, U.S.A.

**Whittier
Wood**[™]
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA

Production Code:

VN

07/10


1356AFGAC; 1356AFCAF McKenzie Twin Headboard

1357AFGAC; 1357AFCAF McKenzie Full/Queen Headboard


1358AFGAC; 1358AFCAF McKenzie King/Cal-King Headboard

— Parts List

Please identify the parts and check that quantities received match those on this list.
If you need to replace a part, refer to the following letter and model name.

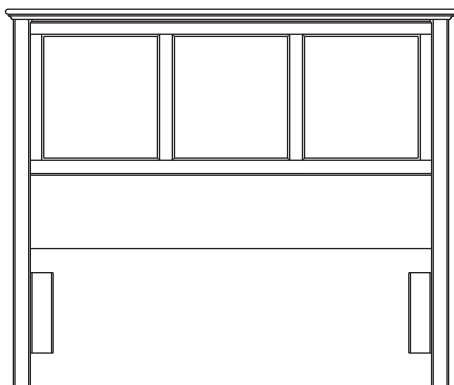

A — Headboard Assembly — Qty. 1
(for 1357AFGAC; 1357AFCAF
& 1358AFGAC; 1358AFCAF)
1357AFGAC shown above.

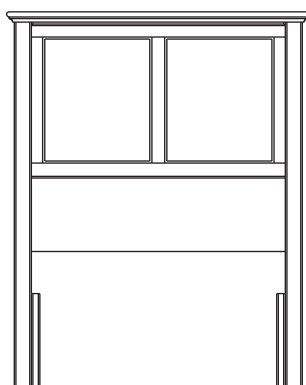


F — Headboard Assembly
— Qty. 1
(for 1356AFGAC; 1356AFCAF)



B — Block 1
— Qty. 2 (attached)
(for 1357AFGAC; 1357AFCAF
& 1358AFGAC; 1358AFCAF)



G — Block 2
— Qty. 2 (attached)
(for 1356AFGAC; 1356AFCAF)



C — #12 x 2-1/2" Pan Head
Screw — Qty. 8 (inserted)



D — #12 x 1-1/4" Pan
Head Screw — Qty. 6



H — #8 x 1-5/8" Black Screw
— Qty. 4 (inserted)



E — Washer
— Qty. 6



I — #8 x 20mm Pan Head Screw
— Qty. 17 (inserted) (1356AFGAC; 1356AFCAF)
— Qty. 22 (inserted) (1357AFGAC; 1357AFCAF)
— Qty. 26 (inserted) (1358AFGAC; 1358AFCAF)

Assembly Instructions

Tools Required: Drill, 1/8" bit, Phillips screwdriver

IF YOU ARE USING A HOLLYWOOD BED FRAME:

1. Adjust the Hollywood frame to fit your mattress and box spring.
2. Place the Headboard (A) against the end brackets of the frame and mark the locations for the screws. Drill pilot holes approximately 1-1/4" deep. (To make sure you don't drill deeper, measure 1-1/4" up from the end of the drill bit and wrap a piece of tape around the bit. Stop drilling when the edge of the tape meets the wood.)
3. Position the Headboard (A) against the frame and attach using #12 x 1-1/4" Pan Head Screws (D) and Washers (E).