### **Addison Panel Storage Beds**

**DUET finish** 

Assembly Instructions
Model #

### **1995DUET**

**Addison Full Panel Storage Bed** 

### **2018DUET**

**Addison Queen Panel Storage Bed** 

### **2022DUET**

**Addison King Panel Storage Bed** 



Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

#### **IMPORTANT NOTES:**

- Wood can be susceptible to changing color over time when exposed to strong sunlight. Use window shades, drapes or blinds to protect your furniture. To help the surface age evenly and avoid dark and light spots, periodically move items to expose the entire surface to an even amount of light so it may develop a uniform patina.
- For normal household use only. Not recommended for commercial use.
- · Remove items before you move this unit.
- · Do not overload the drawers.
- · This assembly requires two people.

### **WARNING**

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: www.p65warnings.ca.gov/wood

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer. For more information go to: www.p65warnings.ca.gov/furniture

#### DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

#### **CUSTOMER SERVICE**

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:
Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).
You may leave a message 24 hours a day, seven days a week.

Customer Service: 800-653-3336 • Outside the U.S.: 541-687-0213

Fax: 541-687-2060 Email: info@whittierwood.com

Whittier Wood 1°	P.O. Box 2827
F U R N I T U R E	Eugene, OR 97402 USA

Production Code:	
VN	08/18

Parts List

Please note this Assembly Instruction is for all three beds. Please identify the bed part number when ordering parts.

Please identify the parts and check that quantities received match those on this list. If you need to replace a part, refer to the following letter and part name.

## 1997DUET Full Addison Panel Headboard/Footboard Kit (x1) 2020DUET Queen Addison Panel Headboard/Footboard Kit (x1)

Part	Description		Quantity
Α	Headboard Assembly		1
В	Footboard Assembly		1
K	#8 x 7/8" Black Lo-Profile Screw (inserted)	acacacaca	9
L	#8 x 1-1/4" Black Screw		24
Υ	5/16" x 14mm Insert Nut (inserted)	(Mass)	8
ZE	5/16" x 2-1/4" Hex Bolt		6
ZF	5/16" x 35mm Hex Bolt		18
ZG	1/4" Flat Washer		24

Parts List

## 2023DUET King Addison Panel Headboard/Footboard Kit (x1)

Part	Description		Quantity
			,
Α	Headboard Assembly	Ц Ц	1
В	Footboard Assembly		1
С	Center Deckboard		1
K	#8 x 7/8" Black Lo-Profile Screw (inserted)	acceacach ()	9
L	#8 x 1-1/4" Black Screw		36
Υ	5/16" x 14mm Insert Nut (inserted)	Olio	8
ZE	5/16" x 2-1/4" Hex Bolt		6
ZF	5/16" x 35mm Hex Bolt		18
ZG	1/4" Flat Washer		24

Parts List

# 1996DUET Full Pedestal Kit (x2) 2019DUET Queen/King Pedestal Kit (x2)

Part	Description		Quantity
D	Pedestal		1
E	Drawer Box (assembled)		3
F	Drawer Face (attached)		3
G	Left/Right Center Deckboard		1
Н	20" Drawer Slides (installed)	•D •D •O	3 sets
I	#6 x 3/4" Philtruss Screw (inserted)		18
J	#6 x 1/2" Philtruss Screw (inserted)		18
K	#8 x 7/8" Black Lo-Profile Screw (inserted)	ecucaca	18
L	#8 x 1-1/4" Black Screw (inserted)		8
М	#8 x 1-5/8" Black Screw (inserted)		24
N	#8 x 1-5/8" Machine Screw Tuscan (installed)	<del>-</del>	6
0	5/32" x 10mm Insert Nut (inserted)		6
Р	Black Walnut Pull (attached)		3

Parts List

### 1998DUET Addison Full Base Kit (x1)

Part	Description				Quantity
Q	Mitered End Support				1
R	Square End Support				2
S	Left Support	· •	0 0 0	<b>□</b> : <b>•</b>	1
Т	Right Support		•	1:	1
W	#8 x 1-3/4" Pan Head Screw (inserted)			000000000000000000000000000000000000000	12
X	#10 x 3/4" Pan Head Screw (inserted)				16
Υ	5/16" x 14mm Insert Nut (inserted)			A TILL	18
ZA	Wood Dowel (inserted)				12
ZB	Foot Bracket (attached)				4
ZC	Adjustable Glide (installed)		1		4
ZH	Full Trestle Rail (9-1/8")				4

### 2021DUET Addison Queen Base Kit (x1)

Part	Description			Quantity
Q	Mitered End Support			1
R	Square End Support			2
S	Left Support	<b>: ±</b>	0 0 0	1
Т	Right Support	<b>!</b>		1
U	Queen Trestle Rail (15-1/8")			4
W	#8 x 1-3/4" Pan Head Screw (inserted)		(*)))))))))))))))))))))))))))))))))))))	12
Χ	#10 x 3/4" Pan Head Screw (inserted)		Danna	16
Υ	5/16" x 14mm Insert Nut (inserted)		Olio	18
ZA	Wood Dowel (inserted)			12
ZB	Foot Bracket (attached)			4
ZC	Adjustable Glide (installed)			4

Parts List

### 2024DUET Addison King Base Kit (x1)


Part	Description				Quantity
Q	Mitered End Support			1	
R	Square End Support		1		2
S	Left Support	: 1	* D	<b>∏: 1</b>	1
Т	Right Support		•	1:	1
V	King Trestle Rail (31-1/4")				4
W	#8 x 1-3/4" Pan Head Screw (inserted)				12
X	#10 x 3/4" Pan Head Screw (inserted)			Danna	16
Υ	5/16" x 14mm Insert Nut (inserted)			Olin Jan	18
ZA	Wood Dowel (inserted)				12
ZB	Foot Bracket (attached)				4
ZC	Adjustable Glide (installed)			0	4

Assembly Instructions


This assembly requires two people.

**Tools Required**: Phillips screwdriver, 1/2" open end or box end wrench.

1. Lay out and identify the parts from the Full (#1998) or Queen (#2021) or King (#2024) Base Kit. Set aside part Trestle Rail (ZH) (Full) or Trestle Rail (U) (Queen) or Trestle Rail (V) (King) for use later in the assembly process. Use the notch and dowels on Square End Support (R) and Mitered End Support (Q) as a guide attach to the Right Support (T) using the Hex Bolts (ZE) and Washers (ZG) from the Headboard/Footboard Kit. See Figures 1 and 1a.

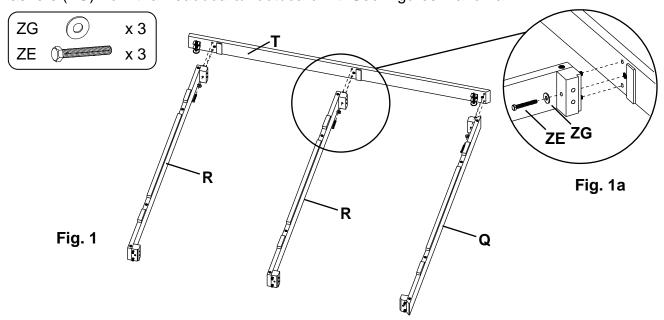


2. Attach the assembly to the Left Support (S) Using Hex Bolts (ZE) and Washers (ZG). See Figures 2 and 2a. Identify the Headboard end of the assembly and place near the final bed location. See drawing below.

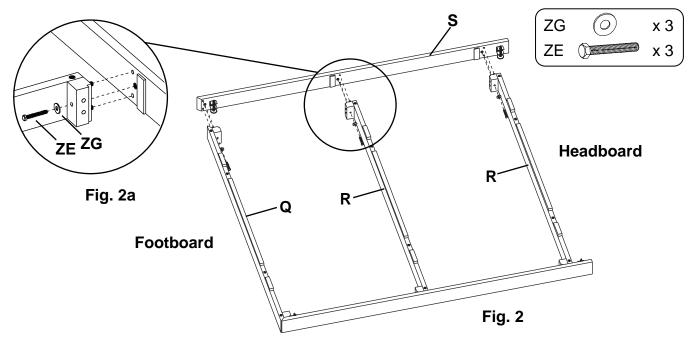

Assembly Instructions

This assembly requires two people.

3. Place each pedestal (D) on top of the base kit against the side of and between the locater blocks of the Base Kit. See Figure 3.

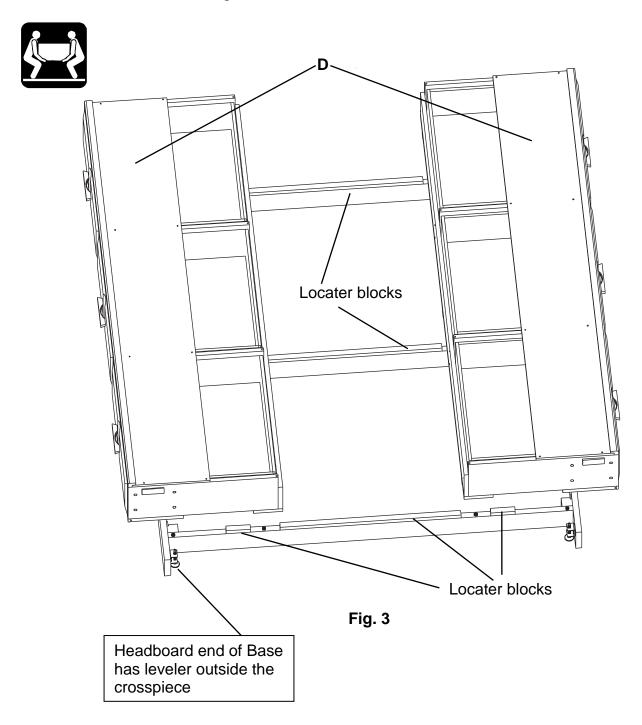

Assembly Instructions

This assembly requires two people.

4. Open the drawers and attach the pedestal to the base using Hex Bolts (ZF) and Washers (ZG) only finger tight. See Figures 4 and 4a.

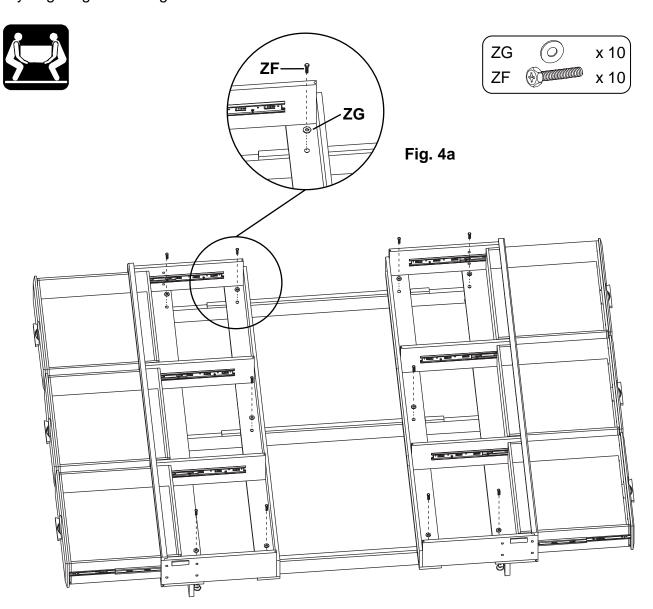



Fig. 4
(Notched Deckboards removed for illustration purposes)

Assembly Instructions

This assembly requires two people.

5. NOTE: When attaching the Footboard (B) to the Pedestal/Base assembly attach it at the end of the Base with the leveler behind the crosspiece.


There are two options to attach the Footboard (B) to the Pedestal Assembly. Option a) Release the two drawers (E) at the end of the assembly as shown in Fig. 5a. Open the Drawers (E) until the back edge of the drawer is even with the front of the Pedestal. Reach under the attached deckboard from the backside of the pedestal and insert Bolts (ZF) and Washers (ZG) into the Footboard (B). Push the drawers closed. Option b) remove the two end drawers (E) completely. Insert the bolts and washers into the Footboard and reinstall the drawers. See Fig. 5b, 5c.

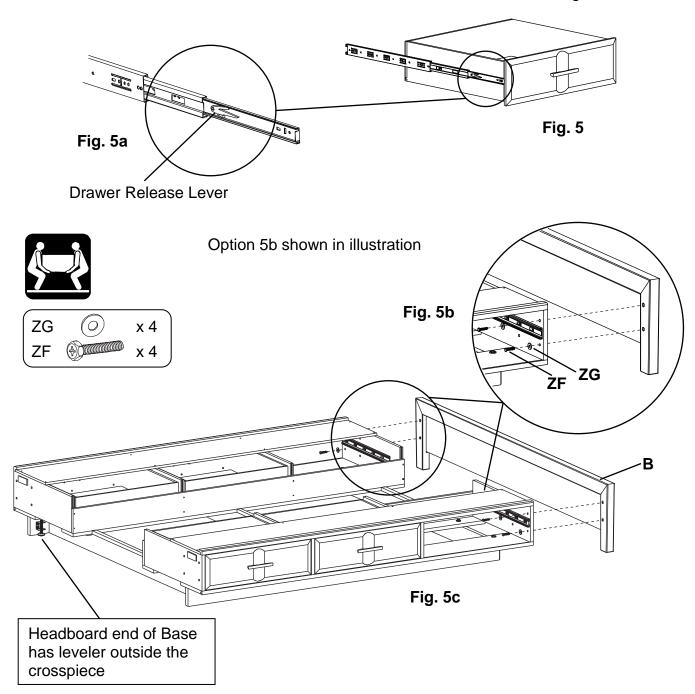

Assembly Instructions

This assembly requires two people.

6. Attach the Headboard (A) with Hex Bolts (ZF) and Washers (ZG) using assembly option a) or b) from Step 5. See Figures 6 and 6a.

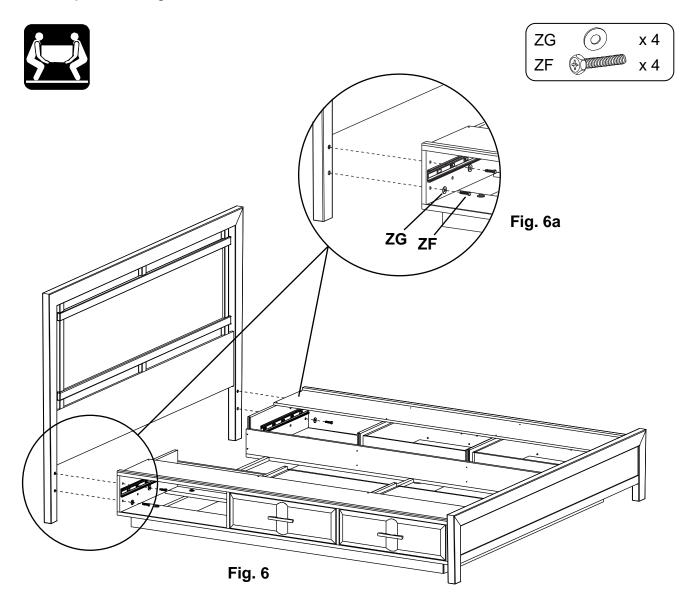


Option 5b shown in illustration

Assembly Instructions

This assembly requires two people.

- 7. Once the Headboard and Footboard are attached, open all drawers and tighten Hex Bolts (ZF) and Washers (ZG) on the inside of the bed assembly.
- 8. Adjust levelers (ZC) only if floor is uneven or if bed has movement . See Figures 8 and 8a.

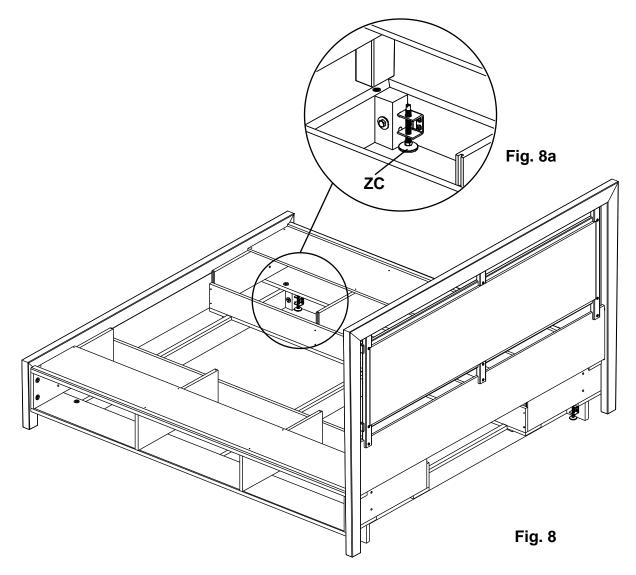


(Drawers and Bottom Boards removed for illustration purposes)


Assembly Instructions

This assembly requires two people.

9. Insert Full Trestle Rail Supports (ZH) or QueenTrestle Rail Supports (U) or King Trestle Rail Supports (V). See Figures 9 and 9a.

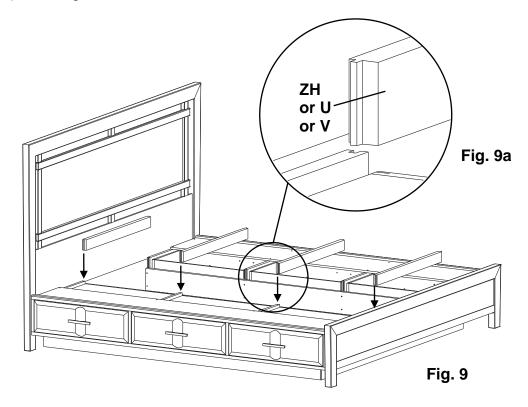

 Place the Left/Right Center Deckboards (G) as shown in Figure 11 and secure with twelve #8x1-1/4" Black Screws (L). There should be a small gap between each deckboard. See Figure 10.

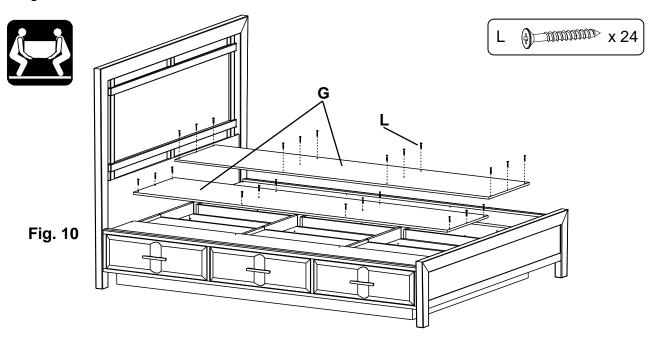

Assembly Instructions

This assembly requires two people.

#### Step 11 is for the Addison King Panel Storage Bed (#2022)

11. Place the Center Deckboard (C) as shown in Figure 11 and secure with twelve #8 x 1-1/4" Black Screws (L). If you need to adjust the center feet, remove the Center Deckboard, adjust the glides and reattach the deckboard.

