# **Addison Platform Beds**

**DUET finish** 

Assembly Instructions
Model #

3816DUETa
Addison Queen Platform Bed
3818DUETa
Addison King Platform Bed
3820DUETa
Addison Cal-King Platform Bed



Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.

#### **IMPORTANT NOTES:**

- Wood can be susceptible to changing color over time when exposed to strong sunlight. Use window shades, drapes or blinds to protect your furniture. To help the surface age evenly and avoid dark and light spots, periodically move items to expose the entire surface to an even amount of light so it may develop a uniform patina.
- For normal household use only. Not recommended for commercial use.
- Remove items before you move this unit.
- · This assembly requires two people.

This item has a total maximum combined weight limit of 850 lbs. inclusive of foundation and people. An optional center foot assembly is included to increase the limit to approximately 1,200 lbs.

## **WARNING**

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: www.p65warnings.ca.gov/wood

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer. For more information go to: <a href="https://www.p65warnings.ca.gov/furniture">www.p65warnings.ca.gov/furniture</a>

#### DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

#### **CUSTOMER SERVICE**

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

Hours: Our friendly customer service staff can be reached:Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).You may leave a message 24 hours a day, seven days a week.

Customer Service: 800-653-3336 • Outside the U.S.: 541-687-0213

Fax: 541-687-2060 Email: info@whittierwood.com



VN	04/19
Production Code:	

Parts List

Please note this Assembly Instruction is for all three beds. Please identify the bed part number when ordering parts.

Please identify the parts and check that the quantities received match those on this list. If you need to replace a part, refer to the model number, part letter and name.

## 3802DUETa Addison Queen Platform Kit (x1) 3806DUETa Addison King Platform Kit (x1) 3809DUETa Addison Cal-King Platform Kit (x1)

Part	Description	Quantity		
Ja	End Platform Assembly	· · · · · · · · · · · · · · · · · · ·	1	
Ka	Headboard Platform Assembly		1	
L	#8 x 1-1/8" Lo-Profile Screw (inserted)		12	
М	#8 x 1-3/4" Pan Head Screw (inserted)		12	
N	#8 x 1-5/8" Black Screw (inserted)	<a (inserted)<="" href="mailto:commanded-&lt;/td&gt;&lt;td&gt;33&lt;/td&gt;&lt;/tr&gt;&lt;tr&gt;&lt;td&gt;0&lt;/td&gt;&lt;td&gt;1/4" t-nut="" td=""><td></td><td>48</td></a>		48
Р	Wood Dowel (inserted)		2	

Parts List

# 3803DUETa Addison Queen/King/Cal-King Platform Connector Kit (x1)

Part	Description	Quantity
В	18mm Flat Washer	44
D	1/4" x 22mm Hex Bolt	24
Е	1/4" x 35mm Hex Bolt	20
Q	Foot Assembly	4
R	#6 x 3/4" Brass Flat Head Screw (Inserted)	24
S	Wool Felt Pad/Glide (Attached)	5
Т	Metal Foot Bracket (Attached)	4
U	1500mm Channel	4
		,
V	Center Foot Assembly	1
W	#8 x 1-1/4" Black Screw (inserted)	4
Χ	#8 x 2" Black Screw (inserted)	5

# 3817DUET Addison Queen Platform Filler Strip (x1) 3819DUET Addison King Platform Filler Strip (x1) 3821DUET Addison Cal-King Platform Filler Strip (x1)

Part	Description		Quantity
N	#8 x 1-5/8" Black Screw		7
Р	Wood Dowel		2
Υ	Filler Strip	. , , ,	1
ZA	Cleat	0	2
ZB	#10 x 2" Pan Head Screw		2


Assembly Instructions

This assembly requires two people.

**Tools Required:** Phillips screwdriver, 7/16" open end or box end wrench and rubber mallet.

**NOTE:** Remove this instruction from the Filler Strip Kit carton. Place Filler Strip and hardware kits to the side to allow space for assembling the platform portion of the bed. Open the #3803 Platform Connector Kit, which attaches the two Platforms together.


1. Open and unfold the Platform Kit carton in the approximate location where the bed will be placed. This will help protect the flooring and the faces of the platform components. Place the Headboard Platform Assembly (Ka) face down in the approximate location where the headboard will be located with the inside edge facing the End Platform Assembly (Ja). Align the Dowels (P) in the edge of the Headboard Platform Assembly (Ka) with the holes in the edge of the End Platform Assembly (Ja) see Figures 1 and 1a.

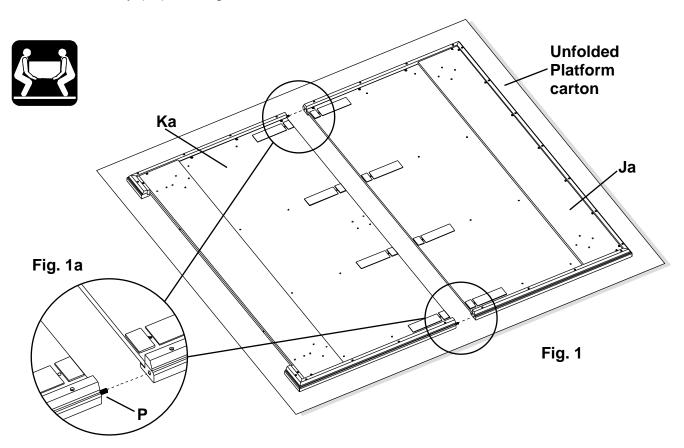

Assembly Instructions

This assembly requires two people.


2. Slide the two sections together so that the flat edges touch as shown in Figure 2. Using the hardware from the #3803 Connector Kit, place the 1500mm Channels (U) on the Platform and align over the predrilled holes in the platform. Attach the Channels (U) with 1/4" X 22mm Hex Bolts (D) and 18mm Flat Washers (B). See Figures 2 and 2a.

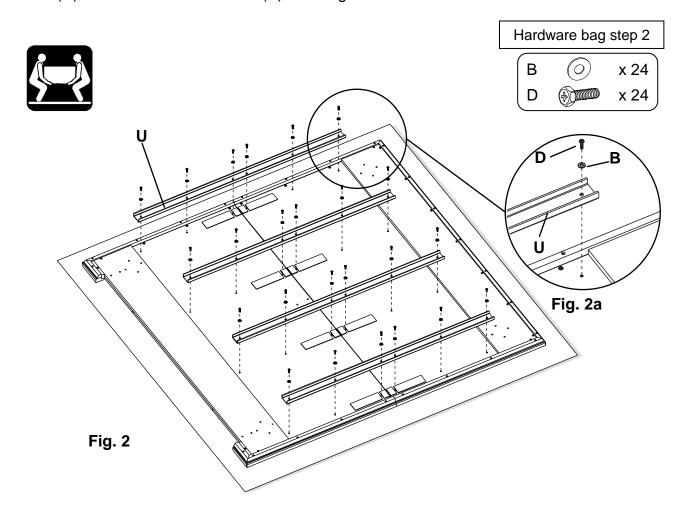

Assembly Instructions

This assembly requires two people.


3. Place the Foot Assemblies (Q) onto the Platform Assembly so that the holes in the metal brackets align over the predrilled holes. The legs should angle outward toward the corner of the platform. Attach the Foot Assemblies (Q) with 1/4" X 35mm Hex Bolts (E) and 18mm Flat washers (B). See Figures 3 and 3a.

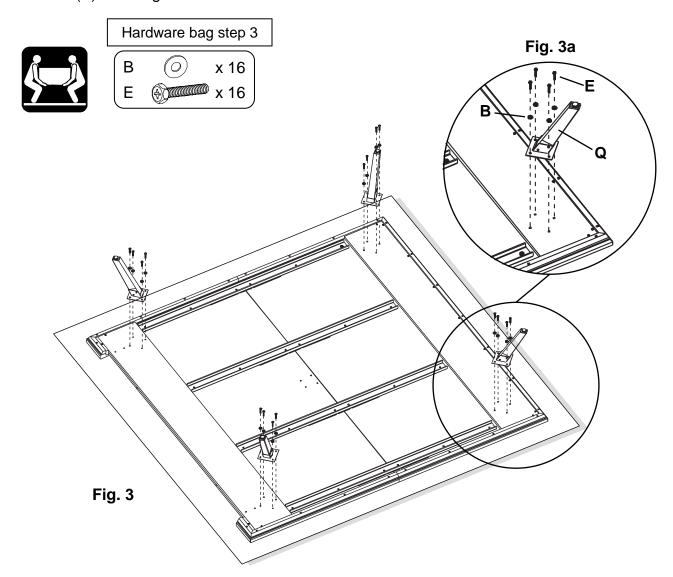

Assembly Instructions

This assembly requires two people.


4. The attachment of the Center Foot Assembly (V) is optional if there is no need for extra support beyond the 850 lbs. weight limit. The addition of the foot will reduce the flex built into the design of the bed and provide more support. To attach the Center Foot Assembly (V) align the block over the four holes in the Headboard Platform Assembly (Ka). Attach with 1/4" X 35mm Hex Bolts (E) and 18mm Flat washers (B). See Figures 4 and 4a.

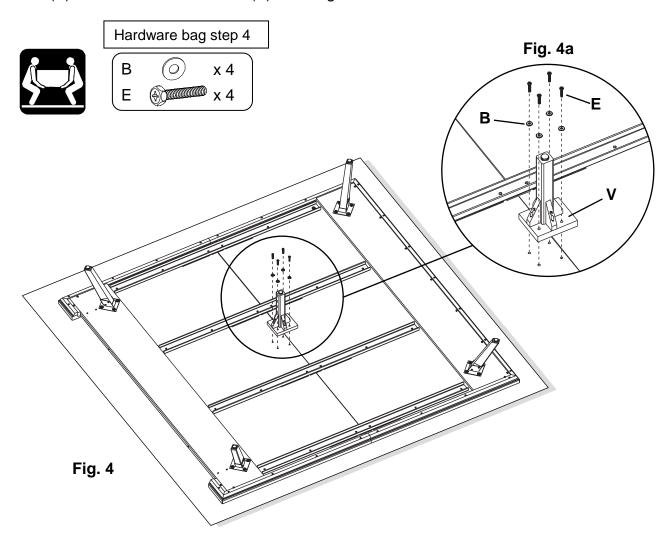

Assembly Instructions

This assembly requires two people.


5. Place two Wooden Dowels (P) into the Filler Strip (Y). Gently hammer in the dowels so that they are entirely seated in the wood. Insert the dowels of the Filler Strip assembly (Y) into the dowel holes of the Headboard Platform Assembly (Ka). See Figures 5, 5a and 5b.

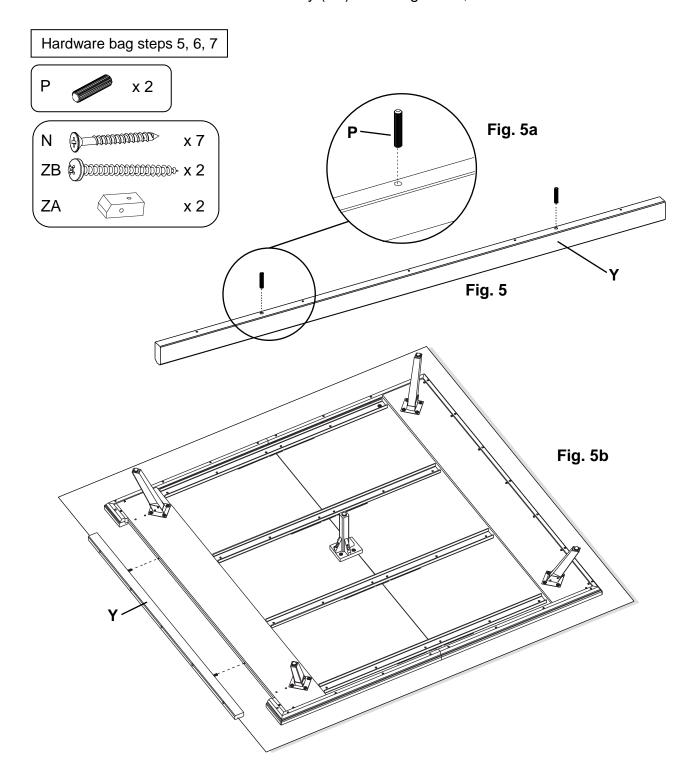

Assembly Instructions

This assembly requires two people.


6. Attach the Filler Strip (Y) to the Headboard Platform Assembly with five 1-5/8" Black Screws (N) screwed into the pre-drilled holes. See Figures 6 and 6a.

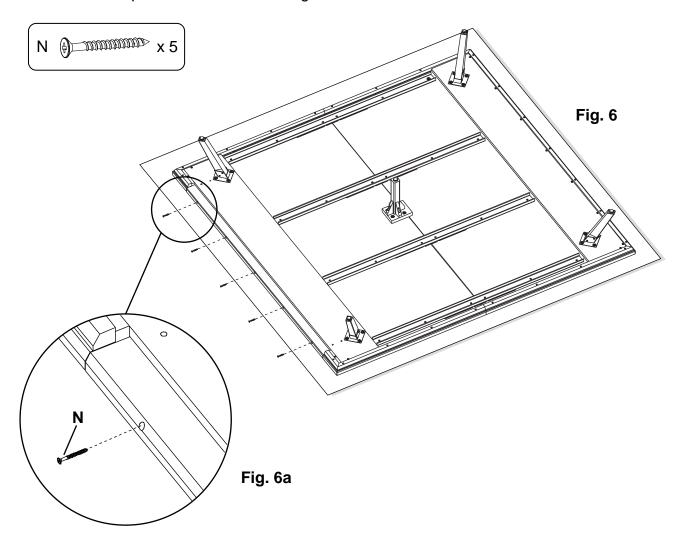

Assembly Instructions

This assembly requires two people.

7. Place the Cleat (ZA) onto the filler strip assembly, aligning with the pre-drilled holes. Secure each cleat with one 1-5/8" Black Screw (N) placed into the top of the cleat and one 2" Pan Head Screw (ZB) screwed into the pre-drilled hole on the side of each cleat. See Figures 7 and 7a.

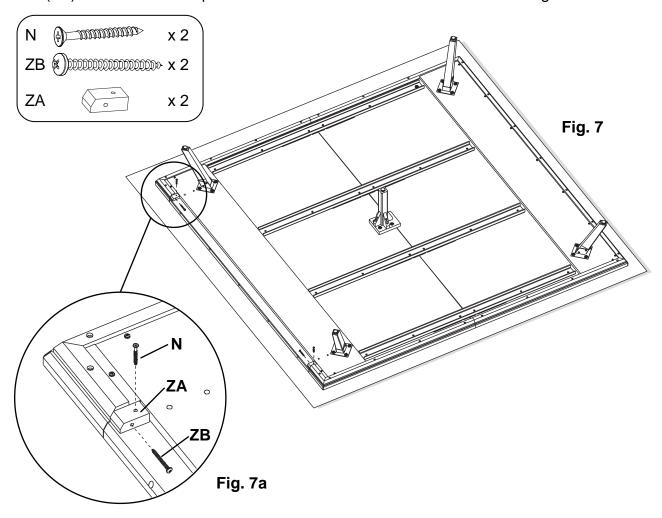

Assembly Instructions

This assembly requires two people.

8. CAUTION NEEDED: Flip the Platform Assembly over onto the feet. Use extreme care not to bump into light fixtures, ceiling fans, walls, ceiling, or other objects in the room. Protect the corners of the Platform. Do not apply force to the Foot Assemblies (Q). Carefully slide the Platform carton out from beneath the Platform Assembly and recycle or discard. See Figure 8.

