



569Wa, 573Wa, 574Wa, 577Wa Large Leg Kit Addendum

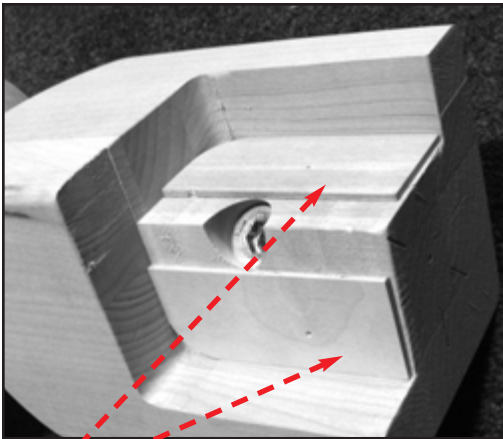


- 1** **Spacers** have been added to help ensure the ends of the aprons make proper contact with the legs.


Ends of apron snug against the leg.

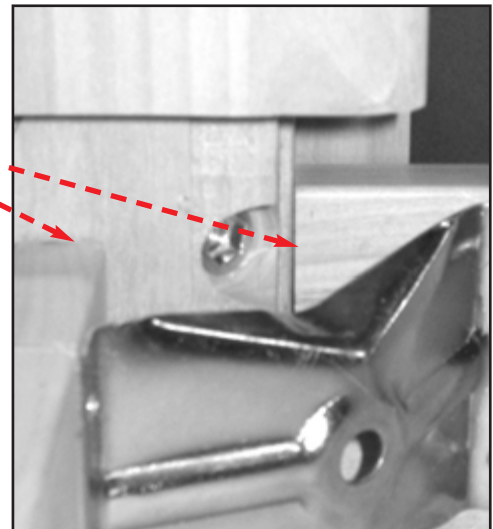


- 2** When attaching the leg to the top, align the ends of the apron so they fit snugly against the legs as shown above.

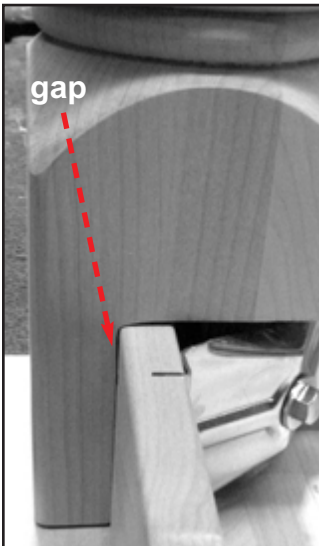

- 3** Bolt the legs in place according to the assembly instruction. A small gap is normal.

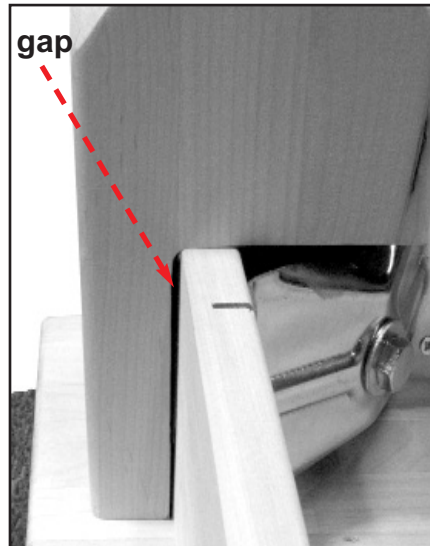

- 4** After bolting a leg to the table, there may be a gap similar to the one in the above photo. This does not affect the structural integrity of your table.

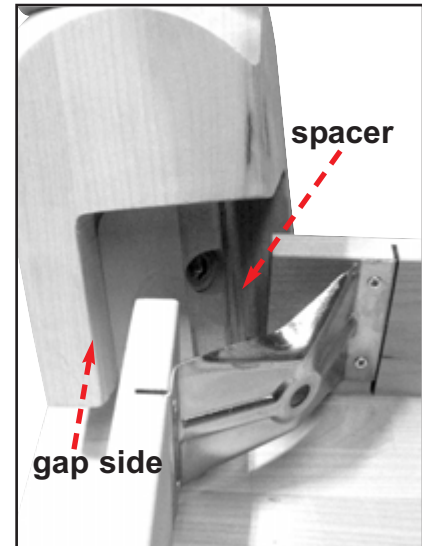

- 5** However, if you feel the gap is too large, remove the hex bolt and washer. Using a slotted screwdriver, remove the spacer that is attached to the opposite side of the gap. (If part of the nail remains in the leg, hammer it down, flush to the face of the leg.) OR replace that spacer with a thinner spacer. Reattach the leg according to the assembly instruction. **Remember that the ends of the aprons must fit snugly against the legs as shown in Figure 2.**